



# EVELO

# DPC-18 DISPLAY



OWNER'S MANUAL




EVELO.COM




# DISPLAY AND KEYPAD

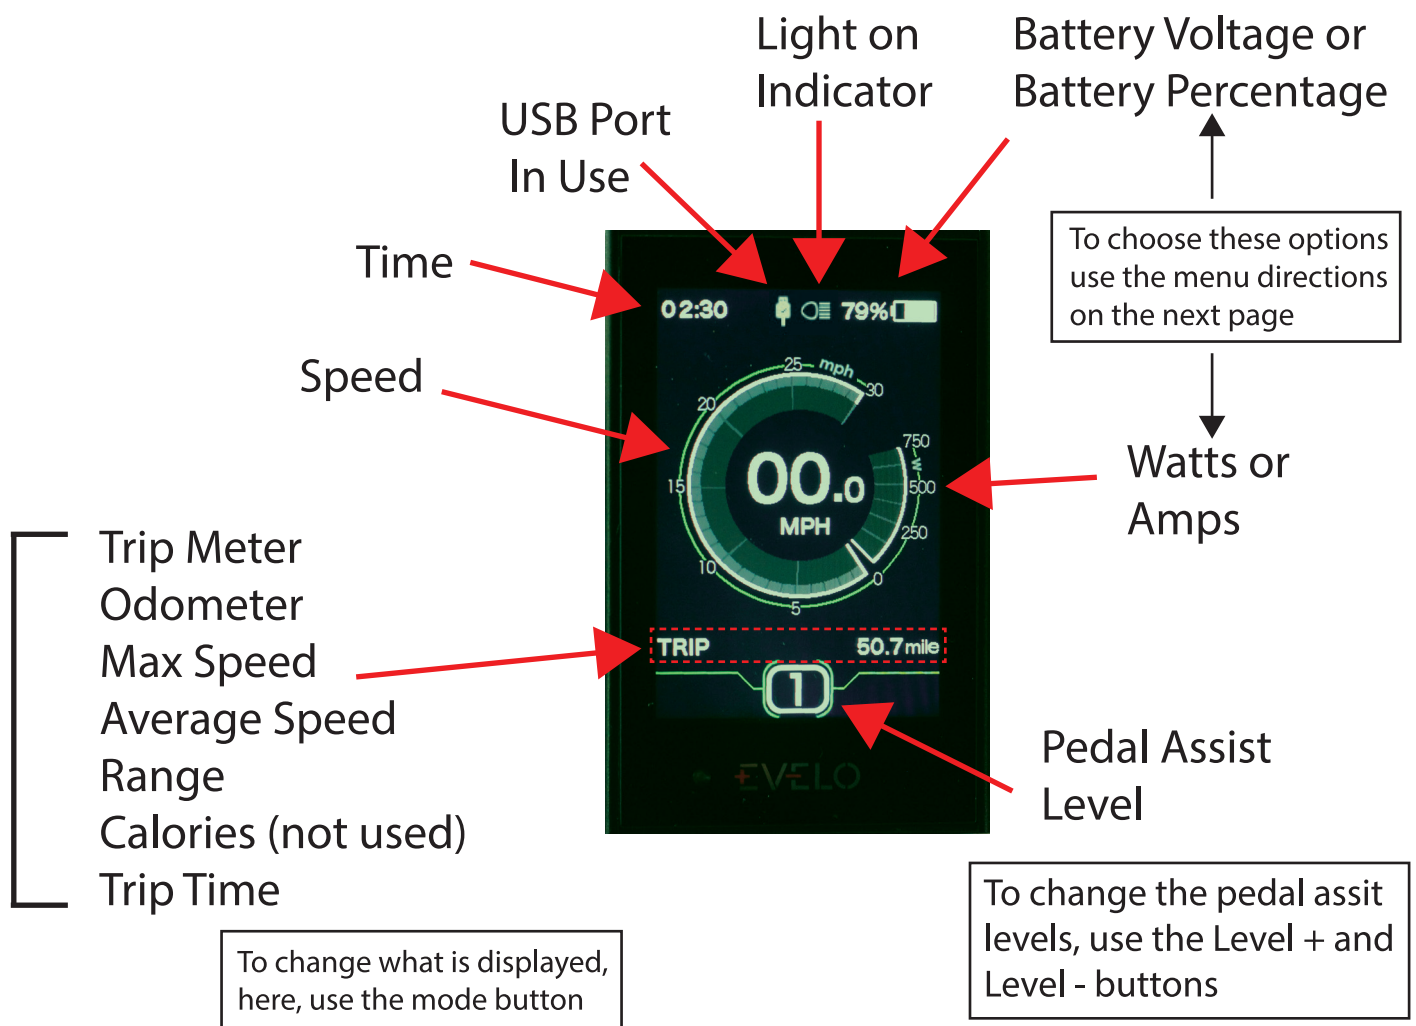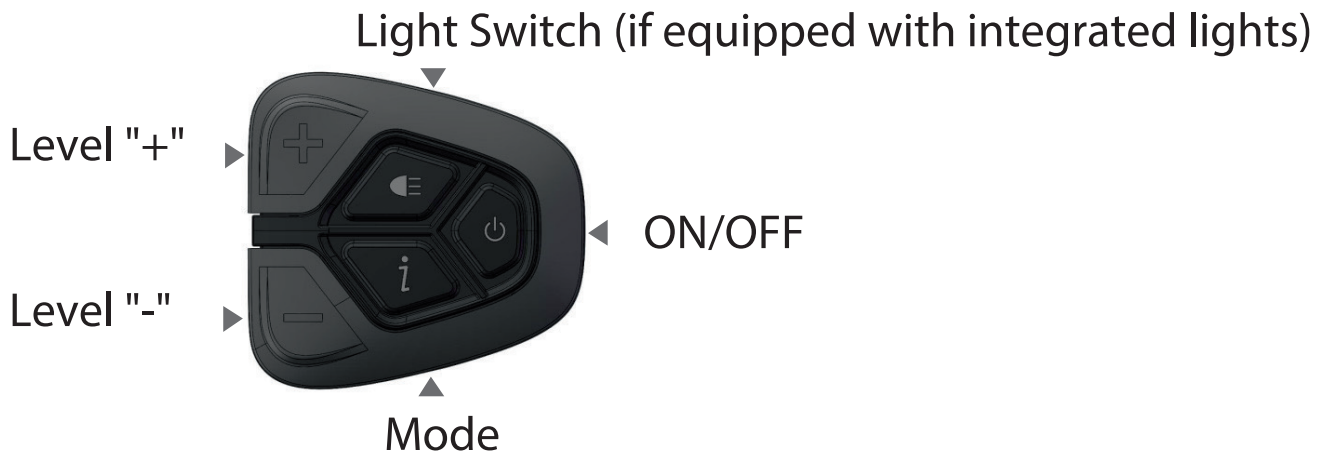

# USER SETTINGS

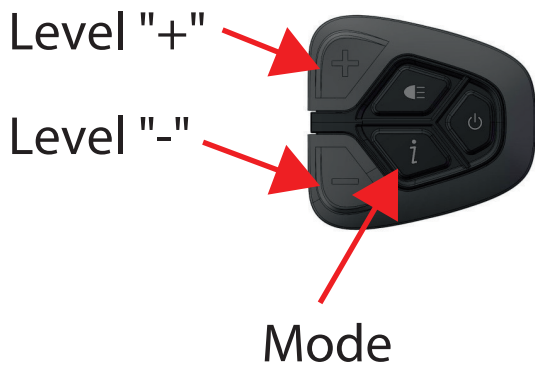

To enter the settings menu on your display, tap the "Mode" button 2 times as fast as you can. You will then get the menu options below.

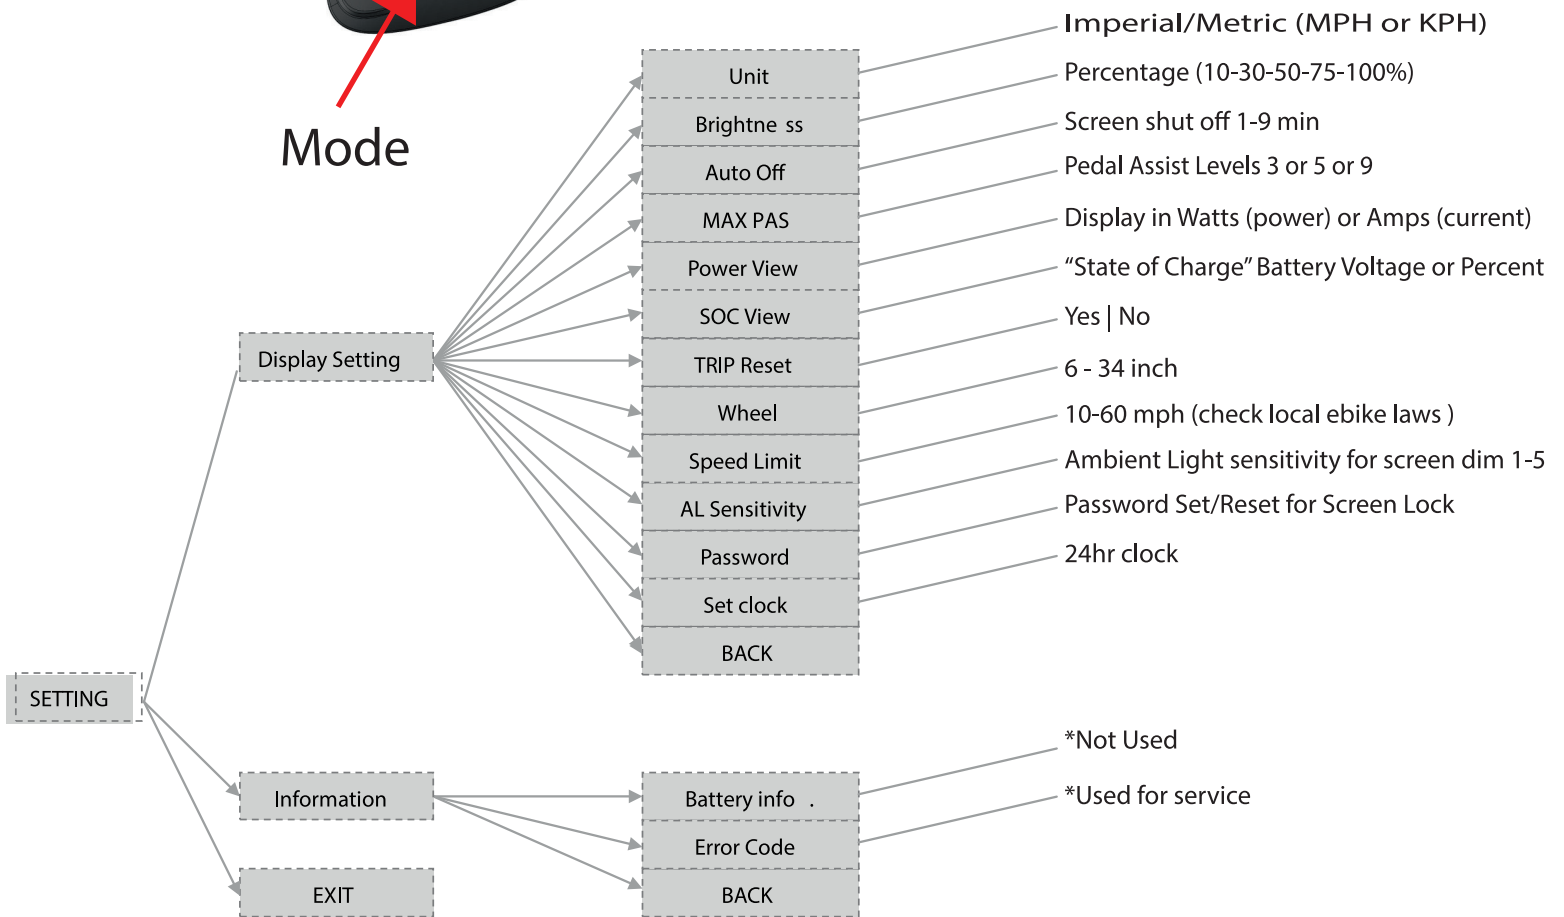

The Level + and Level - buttons are used to navigate the menu, as well as to highlight between options within each menu. The Mode button is used to select.

As an example, to change the display from Imperial (MPH) to Metric (KPH) you would:

- 1) Press the mode button twice quickly to bring up the above menu from the main screen.
- 2) Use the Level + or Level - buttons to select "Unit" and then press the mode button once.
- 3) In the pop up menu, you will see two choices- Imperial and Metric. Use the Level + and Level- buttons to select the option you want.
- 4) Press the mode button one time to confirm your choice. This will bring you back to the previous menu where you can choose "BACK" and then on the final menu choose "EXIT" using the mode button.

# FAQ

---

## 1) How do I change the pedal assist level?

From the main screen, use the Level + and Level - buttons.

## 2) How do I change what information is shown on the bottom of the screen?

From the main screen, use the Mode button to scroll through the options.

## 3) How do I enter the settings menu?

Double press the mode button as fast as you can.

## 4) How many pedal assist levels should I set it to- 3, 5 or 9?

The bike comes set at 5 levels of pedal assist. Changing this setting has no affect on power.

## 5) What size wheel do I have on my bike?

Check the side of your tire for 20,24,26,27.5" or 700c (29")

## 6) What happens if I set my Speed Limit above 20mph?

This changes the top motor assist speed in pedal assist level 5 (max level). Changing the speed above 29mph also changes the range on the power display.

Please check local ebike laws before changing.

## 7) What is Ambient Light (AL) Sensitivity?

This is the small sensor on the bottom left corner of your display which dims the screen at night.

## 8) What is the password used for? Can I lock my bike with it?

The password in the display settings is used only to lock the display/electrical system. When you power your bike up, a password will be required to continue. The bike can still physically move, but the electronics will not operate. We cannot reset a lost password.

The default password is: 1919

## 9) What are the Battery Info and Error Code menus?

These are menu options from the manufacturer that are either unused or used for service data.

## 10) I still need help- what do I do?

Send an email to [contact@evelo.com](mailto:contact@evelo.com) or give us a call at 1-877-991-7272